



# AMX 58

*Remote-Controlled Vehicle Security System  
Designed for New Car Dealers*

## Owner's Manual



---

## **Standard Features**

- ☑ **Lifetime Warranty** — We guarantee the operation of the control unit and remote controls for as long as you own your car (see the enclosed warranty card for details).
- ☑ **A Pair of 2-Button/3-Channel Remote Controls** — These remotes allow you to command your system from up to 100 feet away.
- ☑ **User-Friendly Programming** — All programmable features are accomplished with a few flicks of the valet switch.
- ☑ **Zone<sup>1</sup>™ Impact Sensor** — Provides precision detection of intrusion-related vibrations and impacts.
- ☑ **Starter Disable Capability** — For the ultimate in security, the system can disable the vehicle starter whenever the system is armed (requires an optional relay).
- ☑ **LED System Status Indicator** — A highly luminescent LED indicates alarm status and identifies any entry point violations.
- ☑ **High Powered Siren** — Loud, attention-getting siren to alert of an intrusion attempt.
- ☑ **Multi-Car Control** — With one remote you can control up to three vehicles equipped with Prime security systems.
- ☑ **One-Step Remote Control Code Learning** — You can easily add up to four Avital remote controls to your system.
- ☑ **Instant Remote Control Code Deletion** — Removes the code of a lost or stolen remote control to prevent unauthorized alarm operation.
- ☑ **Electronic Scan Prevention (ESP)** — ESP blocks electronic scanner codes to prevent disarming of your vehicle by anyone but you.
- ☑ **Remote Panic with Safety Locks™** — In a threatening situation, you can activate the siren, flash the parking lights and unlock the doors for immediate entry into your vehicle (requires optional relays).
- ☑ **Interior Light Illumination Capability** — When remotely disarmed, the alarm system turns on the interior lights for 30 seconds or until the ignition key is turned on (requires an optional relay).
- ☑ **Multi-Zone Protection** — Offers full perimeter security with separate trigger connections for the doors, hood and trunk (may require optional switches).

- ☑ **Previous Intrusion Alert** — Audibly warns you if the alarm was triggered while you were away.
- ☑ **Specific Zone Intrusion Identification** — The flashing LED identifies which zone was triggered in your absence.
- ☑ **Automatic Malfunction Override** — Automatically bypasses a malfunctioning trigger or sensor, then monitors all other points to continue protecting your vehicle.
- ☑ **User Programmable Active/Passive Arming** — The alarm system can be programmed to arm with the remote control or arm itself automatically.
- ☑ **Remote Silent Arm/Disarm** — At any time, you can *silently* arm or disarm your system by pressing buttons 1 & 2 on your remote control simultaneously.
- ☑ **User Programmable Long-Term Silent Arm/Disarm** — This feature allows you to program the siren chirps off completely until you decide to restore them.
- ☑ **Protected Valet Mode** — Prevents passive arming while your vehicle is serviced or valet parked, allowing you to maintain possession of your remote control.
- ☑ **Automatic System Check** — Automatically tests all triggers and sensors every time you remotely arm your system.
- ☑ **Visual Confirmations** — Your vehicle's parking lights will flash on and off to confirm remote arming, disarming and alarm activation.
- ☑ **Remote Control Door Lock Capability** — Allows you to lock and unlock your doors without using your key (may require optional relays).
- ☑ **User Programmable Passive Door Lock** — Allows you to program the system to automatically lock the doors every time the alarm passively arms.
- ☑ **Remote-Controlled Accessory Output** — Allows you to add a remote controlled optional accessory such as a remote engine starter, window roll-up, trunk release or fuel filler door release.
- ☑ **Alarm State Memory** — Automatically returns your system to its last state if the battery is disconnected and later reconnected.

---

## ***Operating Instructions***

- **Remote Control** — Each of the pair of remote controls is a miniature radio transmitter with a typical range of up to 100 feet. Obstructions, radio interference, cellular transmissions or a weak remote control battery may reduce the range or interrupt transmission. (If the system does not immediately respond, release and press the button again. This works better than holding the button down.) The second remote can be used by a second driver, or kept as a spare. (*Note: AviGlo™ remote controls are not compatible with the AMX58.*)

Additional remote controls or batteries can be purchased from any authorized Prime Dealer, or by calling Prime Security toll-free at 1-800-253-0334 (within the U.S.) or 1-847-215-2233.

- **To Arm The System** — The alarm can be programmed for active or passive arming. Active arming means the alarm can only be armed by the remote control. Passive arming means the alarm will automatically arm itself. See the "Programming Table for System Features" on page 8.
  - **Active Arming.** Press remote button #1 once. The siren will chirp twice, the parking lights will flash twice, the doors will lock,\* the LED will flash slowly and the starter will be disabled.\*\*
  - **Passive Arming.** Turn the ignition key off, exit the vehicle and close the doors. When the interior lights turn off, the LED will flash rapidly for 30 seconds to indicate the system is passive arming. The LED will then flash slowly to indicate the system is armed and the starter is disabled. (At any time during passive arming, you may actively arm the alarm.)
- **To Disarm the System** — Press remote button #1 for 1-2 seconds. The siren will chirp once, the parking lights will flash once, the doors will unlock, the interior lights will turn on (if the optional interior light illumination relay was installed), the LED will turn off and the starter will be enabled.

\* If your system was installed with the door lock/unlock feature, all other door lock/unlock related features will apply.

\*\* If the optional starter disable was installed, all starter disable related features will apply.

- **Remote-Controlled Silent Arm/Disarm** — Press remote buttons #1 and #2 at the same time.
  - **Silent Arm Indications.** The parking lights will flash twice, the doors will lock, the starter will be disabled\* and the LED will flash slowly.
  - **Silent Disarm Indications.** The parking lights will flash once, the doors will unlock, the starter will be enabled and the LED will turn off.
- **Interior Light Illumination Capability** — When the alarm system is remotely disarmed, the vehicle's interior light(s) will turn on for 30 seconds or until the ignition key is turned on (requires an optional relay).
- **To Activate an Accessory** — Press remote button #2 for 1-2 seconds to activate an optional accessory such as trunk release, remote engine starter or a remote control garage door opener.
- **Valet Switch** — The valet switch is a small hidden toggle switch which can only be controlled with the use of your ignition key. This switch allows you to program many features of the alarm system. In the event of a lost or stolen remote control, you can activate the Protected Valet Mode to bypass (shut off) the alarm functions.

**BE SURE TO ASK YOUR DEALER TO SHOW YOU WHERE THE VALET SWITCH IS LOCATED.**

- **Protected Valet Mode** — You can place your system in Protected Valet Mode when your car is being serviced by mechanics, car wash personnel or driven by valet attendants, and still maintain possession of your remote control(s). While in Protected Valet Mode, all alarm functions are bypassed to prevent undesired or accidental arming.
  - **To Turn on Protected Valet Mode**
    1. Turn your ignition key to the "ON" position or start the vehicle.
    2. Flick the valet switch to the "ON" position.
    3. The LED will turn on solid red to indicate the alarm is in Protected Valet Mode.

■ **To Turn off Protected Valet Mode**

1. Turn your ignition key to the "ON" position or start the vehicle.
2. Flick the valet switch to the "OFF" position,
3. The LED will turn off to indicate the alarm is no longer in Protected Valet Mode.

■ **User Programmable Passive Door Lock** — The system will not automatically lock the doors when the alarm passively arms to prevent the keys and remote from accidentally being locked in the vehicle. If you prefer, you can easily program the system to automatically lock the doors every time the alarm passively arms. See the "Programming Table for System Features" on page 8.

■ **Remote Panic with Safety Locks™** — Press and hold button #1 for 3-4 seconds. The siren will sound continually and the parking lights will flash on and off. If the ignition key is off, the doors will unlock. If the ignition key is on, the doors will lock. To deactivate, press button #1 once (may require additional relays).

■ **LED Status Indicator** — The LED on your vehicle's dashboard or center console will inform you of the system status.

LED	Status
Off	System is disarmed
On solid	In Protected Valet Mode
Slow flash	System is armed
Flashing in cycles	See "Specific Zone Intrusion Identification"

■ **Previous Intrusion Alert** — If the vehicle had been tampered with and the alarm has been triggered, the siren will chirp 3 times upon remote disarm instead of the usual 1 chirp.

- **Specific Zone Intrusion Identification** — If the alarm had been triggered in your absence, the siren will chirp 3 times upon remote disarm (*Previous Intrusion Alert*). When you enter the vehicle and turn on the ignition, the LED will flash in cycles to specifically identify which zone has triggered the alarm.

LED	Zone
One Flash...One Flash...	Impact sensor
Two Flash...Two Flash...	Hood trunk trigger
Three Flash...Three Flash...	Door trigger

- **Automatic Malfunction Override** — In the event of a faulty sensor or alarm input trigger zone, the alarm, when remotely armed, will alert you by a series of chirps and light flashes.
- **Instant Remote Control Code Deletion** — In the event of a lost or stolen remote control, all remote controls can be erased from the system's memory to prevent unauthorized system operation. See the "Programming Table for Remote Controls" on page 9.
- **One-Step Remote Control Code Learning** — The system can be programmed to accept as many as four separate remote controls. See the "Programming Table for Remote Controls" on page 9.
- **Alarm State Memory** — If your vehicle's battery is disconnected and later reconnected, the system will automatically return to its last state prior to disconnection, whether it was armed, disarmed or in Protected Valet Mode. For example, if a mechanic disconnects the battery while the alarm is disarmed or in Protected Valet Mode, he won't trigger the alarm when he reconnects the battery. If a thief removes power while the alarm is armed, and reconnects it, the alarm will instantly sound, the parking lights will flash and the starter will be disabled.



■ ***How to Interpret the Chirps and Parking Light Flashes —***

When you press the remote control buttons, the system will respond with chirps (unless you have the chirp muting feature turned on or the system is in Valet Mode) and flashes of the parking lights to indicate the system status.

*An explanation of these chirp/flash acknowledgments is as follows:*

Number of chirps and flashes	Explanation
1	Disarming of the alarm
2	Arming of the alarm
2 and then 4	Armed and there is a sensor malfunction (automatically bypassed)
3	Disarmed and there was an intrusion attempt
4	Armed and there is a trigger malfunction (automatically bypassed)

## ***User-Programmable Features***

All system and remote control programmable features are accomplished by turning the ignition key "ON" (or starting the engine) and flicking the valet switch on and off a preset number of times. The system also allows you to add new remote controls in one step, delete lost or stolen remote controls or rearrange the factory preset remote control functions.

1. Remove the system from Protected Valet Mode. Programming cannot be accessed while the system is in Protected Valet Mode indicated by the LED on solid red.
2. Select the feature you wish to program from the "Programming Table for System Features" or the "Programming Table for Remote Controls" on pages 9 & 10. *Note the number of chirps associated with that feature.*
3. Turn the ignition key to the "ON" position.
4. Within 10 seconds, begin flicking the valet switch on and off. The siren will chirp once each time you flick the switch on then off.
5. Continue flicking the switch on and off, counting the number of chirps.

***NOTE: Stop when you reach the number of chirps associated with your chosen feature.***

6. Follow the "Secondary Action." You will hear a number of chirps to confirm that you have changed the setting of that feature.
7. Turn the ignition key to the "OFF" position.
8. Repeat steps 1-7 for any other feature you wish to program.

### ***Programming Table for System Features***

<b><i>Feature</i></b>	<b><i>Factory Setting</i></b>	<b><i># of Chirps</i></b>	<b><i>Secondary Action</i></b>
Passive/Active Arming	Passive	4	Wait 3 seconds, the siren chirps once for Active or twice for Passive.
Passive Door Lock	OFF	5	Wait 3 seconds, the siren chirps once for OFF or twice for ON.
Remote Arming Siren Chirps	ON	6	Wait 3 seconds, the siren chirps once for OFF or twice for ON.

### ***Programming Table for Remote Controls***

<b><i>Feature</i></b>	<b><i>Factory Setting</i></b>	<b><i># of Chirps</i></b>	<b><i>Secondary Action</i></b>
Arm/Disarm/ Remote Panic	Channel 1 Button 1	8	Press any remote control button you choose to operate this feature. Siren will chirp once for confirmation.
Accessory (-) Output	Channel 2 Button 2	9	Press any remote control button you choose to operate this feature. Siren will chirp twice for confirmation.
Silent Arm/Disarm	Channel 3 Buttons 1 & 2	10	Press any remote control button you choose to operate this feature. Siren will chirp 3 times for confirmation.
One-Step Code Learning	—	11	Press button #1. The siren will chirp 4 times. Remote control will operate at factory preset order.
Instant Code Deletion	—	12	Wait 3 seconds. The siren will chirp twice. All remote controls are erased from memory.



© *Copyright Prime Security 1998*

**31-3274/98**

AMX58 Owner's Manual